


FISHER PUMP

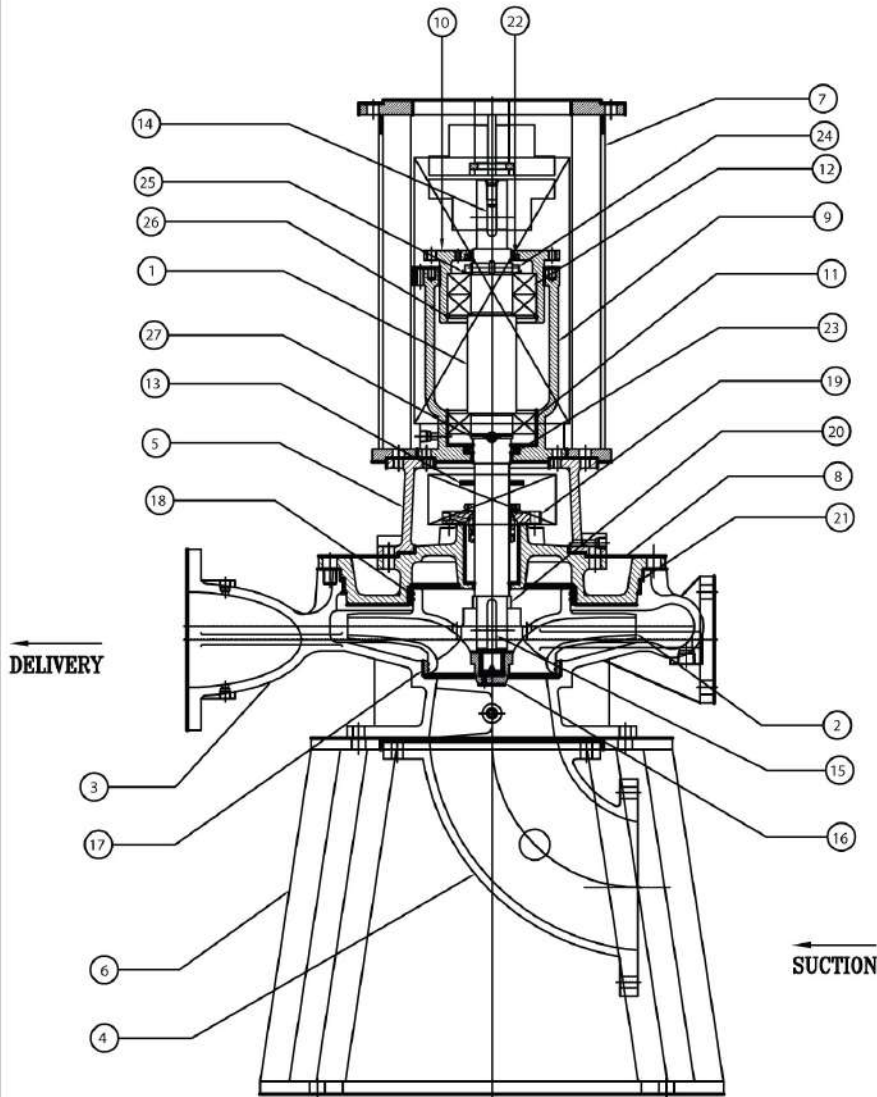

SL.NO.	DESCRIPTION	QTY.	PART NO.
1	SHAFT	1	182
2	IMPELLER	1	102
3	CASING	1	158
4	SUCTION BEND	1	321
5	PEDESTAL	1	320
6	PUMP STOOL	1	171
7	MOTOR STOOL	1	172
8	BACK COVER	1	323
9	BEARING HOUSING	1	317
10	BEARING CARRIER	1	318
11	BEARING(INNER)SKF 21313E	1	-
12	BEARING(OUTER)SKF 2XBECB 7313	2	-
13	WATER THROWER	1	169
14	COUPLING KEY	1	138
15	IMPELLER KEY	1	137
16	IMPELLER NOSE CAP	1	218
17	CASING WEAR RING (FRONT)	1	220
18	BACK COVER WEAR RING	1	222
19	MECHANICAL SEAL	1	151
20	IMPELLER SPACER	1	221
21	'O' RING FOR BACK COVER	1	-
22	OIL SEAL FOR BEARING CARRIER	1	-
23	OIL SEAL FOR BEARING HOUSING	1	-
24	BEARING LOCK NUT (KM 13)	1	141
25	BEARING LOCK WASHER (MB 13)	1	142
26	INTERNAL CIRCLIP	1	-
27	EXTERNAL CIRCLIP	-	-

FISHER PUMP

